



# Poly-Patron Sign

## General Overview

The PP01-1000 - Poly-Patron Sign features an optional reversible display for either male or female use. Designed to be permanently mounted on most portable restrooms. Shipped with pre-drilled holes in the plates along with the necessary fasteners for easy mounting.



## Specifications

Height	7.6 in	19.2 cm
Width	4.5 in	11.4 cm

### POLYJOHN USA

PolyJohn Enterprises Corp  
2500 Gaspar Ave.  
Whiting, IN 46394  
Phone: 800-292-1305  
Fax: 219-659-0625  
www.polyjohn.com  
info@polyjohn.com

### POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.  
Equinox 1 Audby Lane  
Wetherby, England LS22 7RD  
Phone: 44 (0) 1937-583333  
Fax: 44 (0) 1937-583322  
sales@polyjohn.co.uk

### POLYJOHN CANADA

PolyJohn Canada  
P.O. Box 2300  
199 Forest Plain Rd.  
Orillia, Ontario LV3 6S2  
Phone: 800-465-9590  
Fax: 705-325-8250  
info@polyjohncanada.ca

## Full Size Scale Fasteners



(6) PC-000110 - Rivet



(6) PC-000111 - Washer

## ~~Tools Required~~

- Drill with 9/64" Bit
- Rivet Gun with 1/8" Nose Piece

## Installation

**Step 1:** Position the back plate on the right front panel centered with the bottom edge of the plate at 55-1/2" from the ground.

**Step 2:** Using the back plate as a drill guide, drill six 9/64" diameter holes into the right front panel.

**Step 3:** Align the holes of the front plate to the holes of the back plate making sure the opening of the front plate is towards the bottom (*as shown*).

**Step 4:** From the outside rivet the sign into place using (6) PC-000110 rivets with (6) PC-000111 washers on the inside.

**Step 5:** From the bottom insert the slide plate for either use male or female (*making sure the slide plate locks in place in the bottom slot*).

## Reversing the Sign

**Step 1:** Slide a slotted screwdriver into the bottom of the Poly-Patron sign between the back plate and the slide plate (*this will cause the tab on the slide plate to pull out of the corresponding slot into the back plate*).

**Step 2:** Take another slotted screwdriver and push it between the top tab of the slide plate and the front plate. Turn the screwdriver (*this will push the slide plate down thus unlocking the slide plate*).

**Step 3:** Manually push the slide plate down, reverse it to desired display (*male or female*). Reinsert making sure the slide plate locks in place in the bottom slot.

