



Fleet Series™ Convenience Shelf

General Overview

The SG1-0015P - Fleet Series Convenience Shelf is an optional shelf available in pewter grey for the Fleet Series Portable Restroom. Designed to fit around the vent stack as a convenient out of the way shelf with an SU01-0002 Coat Hook. Shipped along with the SU02-0200 - Small Parts Kit that contains all the accessories necessary for mounting.



Specifications

Length	21 in	53.34 cm
Width	12 in	30.48 cm
Depth	1.813 in	4.61 cm
Weight	16 oz	0.45 kg

POLYJOHN USA

PolyJohn Enterprises Corp
2500 Gaspar Ave.
Whiting, IN 46394
Phone: 800-292-1305
Fax: 219-659-0625
www.polyjohn.com
info@polyjohn.com


POLYJOHN WORLDWIDE

PolyJohn (UK) Ltd.
Equinox 1 Audby Lane
Wetherby, England LS22 7RD
Phone: 44 (0) 1937-583333
Fax: 44 (0) 1937-583322
sales@polyjohn.co.uk

POLYJOHN CANADA

PolyJohn Canada
P.O. Box 2300
199 Forest Plain Rd.
Orillia, Ontario LV3 6S2
Phone: 800-465-9590
Fax: 705-325-8250
info@polyjohncanada.ca

Full Size Scale Fasteners

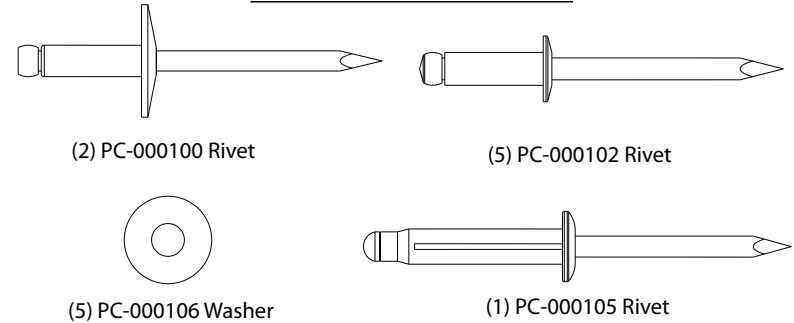

~~Tools Required~~

• Drill • 13/64" Bit • Rivet Gun

Installation

NOTE: The Fleet Series Convenience Shelf Installation will require two people.

Step 1: Using a 13/64" bit, drill holes into the six dimple spots along the inner edges of the shelf.

Step 2: Place the shelf against the vent stack in between the top two ribs of the left side wall panel and against the rear wall panel. Using the shelf as a guide, with a 13/64" bit, drill through the six holes of the shelf and into the left and rear wall panels and into the vent stack.

Step 3: From outside of the unit rivet into the holes just drilled using (5) PC-000102 rivets, with (5) PC-000106 backup washers on the inside. At the vent stack location from inside rivet (1) PC-000105 rivet into the pre-drilled hole of the shelf into the vent stack.

Step 4: Position the SU01-0002 Coat Hook on top of the shelf, centered to the left of the vent stack (as shown). Using the coat hook as a guide, drill two 13/64" holes into the shelf.

Step 5: Position the SU01-0002 Coat Hook underneath the shelf and rivet into place from the topside with (2) PC-000100 rivets.

