



# TS1-1000/TS1-1001 PJ Toilet Seat Installation Instructions

## General Overview

*The PolyJohn Toilet Seat - Part #TS1-1000 with a seat/lid complies with "ANSI Standards". Also available, the seat without a lid - Part #TS1-1001. Shipped unassembled along with the TS1-0200 - PJ Toilet Seat Hinge Parts Kit, containing all the components for easy installation. Fits most "Portable Restrooms". All parts are replaceable.*

### ~~Tools Required for Installation~~

•Pliers

## Instructions

### **Installing Seat with Lid**


1. Push the lid onto the seat (*lining up the holes of the lid with those in the seat*).
2. Line up the holes of the hinge bolts with those in the seat/lid.
3. From the outer edge, push the pins through the holes until flush.
4. Place the seat/lid on to the toilet (*inserting the bolts through the holes in the toilet*). Use pliers to tighten the nuts.

### **For Replacement Hinge Parts:**

**Order Part # TS1-0200/PJ Toilet Seat Hinge Parts Kit**

### **Installing Seat without Lid**

1. Insert the Hinge Cover onto the center hinges of the seat.
2. Line up the holes of the hinge bolt with those in the *hinge cover and seat*.
3. From the outer edge, push the pins through the holes until flush.
4. Place the seat on to the toilet (*inserting the bolts through the holes in the toilet*). Use pliers to tighten the nuts.

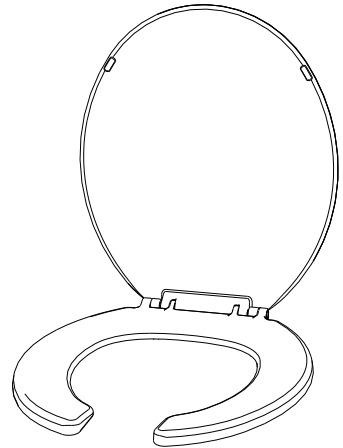

## Specifications

Length	17 in	43.1 cm
Width	14.5 in	36.8 cm
Height	1 in	2.5 cm
Weight	2.9 lb	1.3 kg

### **POLYJOHN USA**

PolyJohn Enterprises Corp  
2500 Gaspar Ave.  
Whiting, IN 46394  
Phone: 800-292-1305  
Fax: 219-659-0625  
www.polyjohn.com  
info@polyjohn.com

### **POLYJOHN WORLDWIDE**

PolyJohn (UK) Ltd.  
Equinox 1 Audby Lane  
Wetherby, England LS22 7RD  
Phone: 44 (0) 1937-583333  
Fax: 44 (0) 1937-583322  
sales@polyjohn.co.uk

### **POLYJOHN CANADA**

PolyJohn Canada  
P.O. Box 2300  
199 Forest Plain Rd.  
Orillia, Ontario LV3 6S2  
Phone: 800-465-9590  
Fax: 705-325-8250  
info@polyjohncanada.ca